

ANBAUANLEITUNG

mounting instructions • instructions de montage • instrucciones de montaje • instrucciones de montaje • istruzioni di montaggio

HPR.00.666.42600/GR

beinhaltet • contains • contient • contiene • contiene

BHG-076-00-NP






www.barkbusters.net

FITTING INSTRUCTIONS • KAWASAKI KLZ1000 Versys ('19 on)
for...

Preparation

Remove original handguards and bar end weights if fitted.

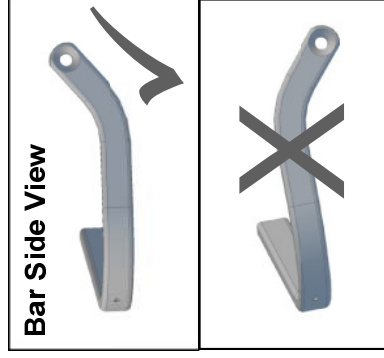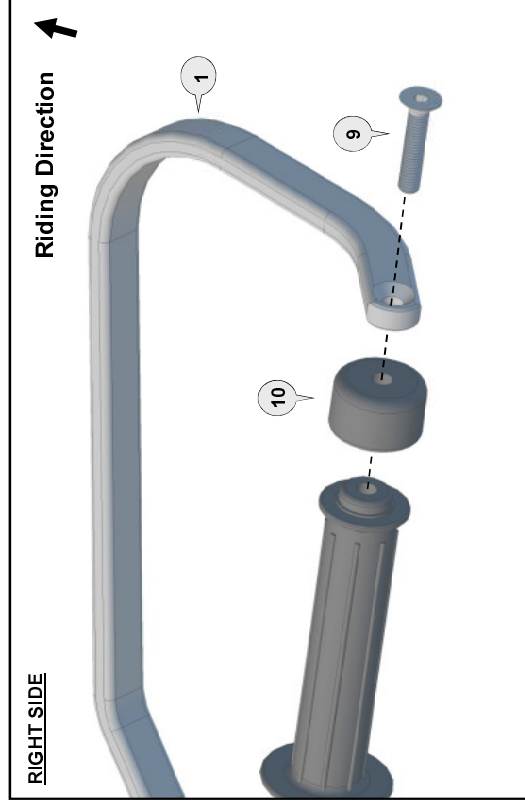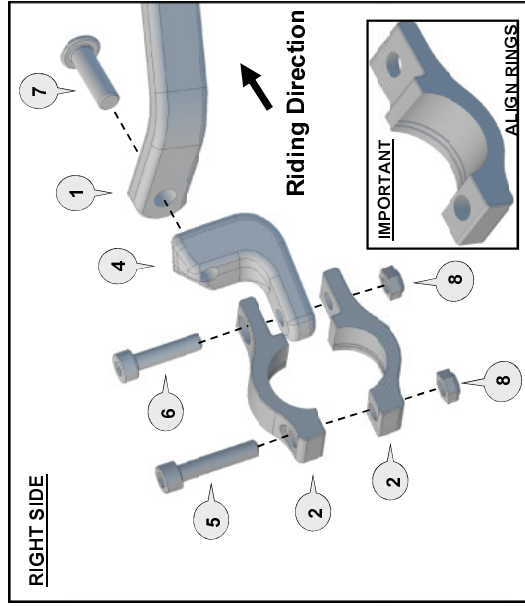

Fitting Procedure shown for the Right side (repeat for left side with applicable parts)

IMPORTANT: There are rings machined into the inside of the tapered clamp surface to assist with a correct fit. The rings on both halves of the clamp should line up with each other and be positioned towards the centre of the motorcycle on the left and right side.

Loosely assemble clamp to handlebar as per diagram.

Attach the handguard backbone with applicable parts to the handlebar end and also to the clamp connector (4) as per diagrams.

Note: The preferred backbone position is horizontal when viewed from the side.

Tighten all bolts in the following order using recommended torque specifications over page.

Tighten bolt (9) into the handlebar end.

Tighten bolt (7) through the aluminium bar (1) to the clamp connector (4 or 3) of the clamp assembly.

Tighten bolt (6) to solidly lock the clamp connector (4 or 3) between the clamp saddles (2).

Tighten bolt (8) to secure the clamp assembly firmly to the handlebar.

Note: The clamp is designed to allow the nut on bolt (6) to pull into the recessed hole. This eliminates the need for a wrench after the bolt starts to tighten.

Personalise Your Protection
Guard options sold separately




JET-003



VPS-003



STM-003

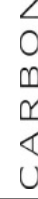


BCF-003




Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net

1 Aluminum Bar




PN: BAR-V-042
Pcs. 1 Left & 1 Right

2 Clamp Saddle




PN: CS-02
Pcs. 2 pairs

3 Connector Left




PN: CP8-L
Pcs. 1

4 Connector Right




PN: CP8-R
Pcs. 1

5 Socket Head Bolt 30mm




PN: M6x30SHCSZP
Pcs. 2

6 Socket Head Bolt 25mm




PN: M6x25SHCSZP
Pcs. 2

7 Button Head Bolt 35mm




PN: M8x35BHCSZP
Pcs. 2

8 Nylock Nut 6mm




PN: M6LN
Pcs. 4

9 Flat Head Bolt 35mm



PN: M8x35FHCSZP
Pcs. 2

10 Bar End Weight



PN: BEW-35
Pcs. 2

Recommended Torque Settings	
M6	10 Nm (7.4 lbf ft)
M8	20 Nm (14.8 lbf ft)



Phone: +61 (0)2 4271 8244
Email: info@barkbusters.net
Web: www.barkbusters.net



CAUTION:

Installation of the handguard is safety-relevant work and can be complicated. We recommend the installation be performed by a motorcycle service technician. Rideworx accepts no liability for damages caused by improper mounting. All screws, bolts and nuts, including all replacement hardware provided by Rideworx, should be tightened to the torque specified in the table. After the first 50km of riding check all screws, bolts and nuts are tightened to the correct torque. We recommend a medium strength liquid thread lock product on all fasteners.

WARNING:

It is important there is a working clearance (approx 3mm) between the throttle grip end and the handguard to ensure a free closing throttle. Check operation of all handlebar controls, specifically the throttle, front brake, kill switch and clutch to ensure they are operating correctly and are in accordance with the OEM specifications. Do not ride the motorcycle if any controls are not operating correctly. Check periodically that all bolts are tight.

Disclaimer:

A failure to follow these fitting instructions could cause serious injury, death or property damage. These handguards are intended solely for use with motorcycles/ATV/snowmobiles/scooters that have not been modified. They are not designed to prevent injury or death while riding or in an accident or crash. The user must ensure that all controls are free of the handguards every time that they ride. By installing and/or using this product you acknowledge that you accept these terms and have followed the fitting instructions.