

BMW R 1200 ST

Schutzbügel Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm
M12	79 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

Crash Bar Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW-MOTECH takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

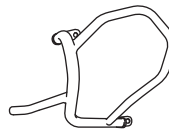

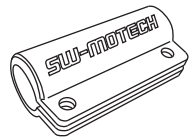






M6	9,6 Nm
M8	23 Nm
M12	79 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.


! Achtung: die Schräglagenfreiheit kann durch den Schutzbügel reduziert werden!

Attention: the lean angle can be reduced by the crash bar!

<p>1 Schutzbügel Crash Bar</p>  <p>SBL.07.551.901/902 Anzahl/ Pcs. 2 (L/R)</p>	<p>4 Innensechskantschraube Hexagon Socket Screw</p>  <p>M12 x 80 DIN 912 Anzahl/ Pcs. 2</p>	<p>7 Klemmschelle Clamp</p>  <p>schwarz/silber SBL.00.051.002 Anzahl/ Pcs. 1</p>
<p>2 Innensechskantschraube Hexagon Socket Screw</p>  <p>M12 x 260 DIN 912 Anzahl/ Pcs. 1</p>	<p>5 Unterlegscheibe Washer</p>  <p>A: 13 DIN 125 Anzahl/ Pcs. 3</p>	<p>8 Innensechskantschraube Hexagon Socket Screw</p>  <p>M6 x 20 DIN 912 Anzahl/ Pcs. 2</p>
<p>3 Distanzbuchse Spacer</p>  <p>Da:25 Di:12,5 h:15 Anzahl/ Pcs. 2</p>	<p>6 Distanzbuchse Spacer</p>  <p>Da:25 Di:12,5 h:25 Anzahl/ Pcs. 2</p>	<p>9 Mutter, selbstsichernd Lock Nut</p>  <p>M6 DIN 985 Anzahl/ Pcs. 2</p>

Rechte Seite/right side

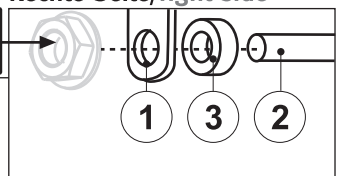
! Original Mutter verwenden.
Use the original nut.



- 3
- 1
- 5
- 2

- 7
- 8
- 9

- 5
- 4
- 6



Fahrtrichtung
Driving direction

Linke Seite/left side

